

# Behmor 2000AB Plus Tip Sheet from *Sweet Maria's*

- Plug your Behmor directly into an outlet. Power cords and power strips may restrict voltage, reducing heat, and extending your roast.
- We recommend starting off with 1/2 lb. of green coffee using the 1 lb. Roast Weight setting, and P1 Profiles setting. This gives you the maximum preset time allowance (18:00), and affords you extra time should you need it to finish your roast.
- For your first roasts, follow our basic roasting instructions in our "Auto mode cheat sheet & quick-start guide" below. We suggest waiting to roast in Manual-Mode until after you've become familiar with Behmor's roasting functions.
- Using our "Quick-Start" method means you will have to end your roast manually by hitting the Cool button. This is typically the most accurate way of targeting a specific roast degree.
- If you find yourself running out of time before your roast is finished, press the "+" Time Increment button. It will add extra time in 15 second increments.
- After 75% of your initial roast time has passed, the Behmor has an alarm that beeps and needs to be cleared within 30 seconds by pressing the Start button. If not cleared, the roaster goes into cooling mode, and Error 7 will appear on the screen. The Behmor also beeps when the timer reaches the final 15 seconds.
- The Behmor has a smoke suppressor, but is not entirely smoke free (especially when roasting dark, or at full capacity). Roasting under a stove hood, or somewhere with good ventilation helps.
- It's important to vacuum out chaff between roasts. Chaff is the coffee skin that detaches while roasting. Some coffees produce more chaff, which can present a fire danger. Watch the roast carefully, and keep your roaster clean!
- In the case of a fire, never open the door as it will introduce oxygen to the fire and make matters worse. When safe, unplug your Behmor and move it outside until the fire is completely extinguished.
- Keeping your Behmor clean will help ensure its longevity! This includes running a "dry burn" to burn off residue, wiping out the roast chamber and sight glass, and vacuuming the machine. Follow the QR code below to watch our cleaning videos.

## Behmor 2000AB Plus

### auto mode cheat sheet & quick-start guide

Here are some tips to help you get started with your first roast using **Auto Mode**. See your manual for more details about all the Behmor features.

- 1** Select the weight button which sets the roast time. We use **1** regardless of batch size and end our roasts manually using the "Cool" button.
  - 1/4** = 8:30    **1/2** = 12:00    **1** = 18:00
- 2** Select the profile setting. We tend to use P1, the hottest heat setting. See manual for full descriptions of each profile.
  - A** (all roast modes) displays exhaust temperature
  - B** displays chamber temperature
  - C** sets timer to 1:40 min (1/4 lb batch), 2:10 (1/2 lb batch) or 3:10 (1 lb batch)
  - D** toggles between drum speeds
- 3** **START** Press the Start button to start your roast  
Also clears the auto safe/unattended alarm that sounds toward the end of the roast cycle
- 4** **COOL** Press to engage the cooling cycle when you've reached your desired roast level.

*sweet maria's*

## Behmor 2000AB Plus

### cheat sheet for manual mode roasting

To enter Manual Mode, press any of the "Profiles" buttons after starting a roast. The button you press will engage the power % setting listed below (we use P5). You know you're in manual when the power level is blinking in the display panel.

- 1** reverts back to auto mode
- A** (all roast modes) displays exhaust temperature
- B** displays chamber temperature
- C** sets timer to 1:40 min (1/4 lb batch), 2:10 (1/2 lb batch) or 3:10 (1 lb batch)
- D** toggles between drum speeds

<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P4</b>	<b>P5</b>
0% power	25% power	50% power	75% power	100% power

Push any of the profiles buttons to enter manual mode at any time during your roast.

- START** (all roast modes) clears the auto safe/unattended alarm

*sweet maria's*



Behmor Resources Page